

Warranty Information

The manufacturer warrants their products to be free from defects in material or workmanship for a period of one year from the date of the original purpose. The limited warranty stated above is subject to these terms and conditions.

TERMS AND CONDITIONS

Limitation on Warranties: All merchandise carries a one (1) Year Manufacturer's Limited Warranty on parts and labor. SELLER MAKES NO WARRANTY, EXPRESSED OR IMPLIED, INCLUDING ANY WARRANTY OR FITNESS FOR ANY PARTICULAR PURPOSE OR MERCHANTABILITY. No agent, employee or representative of Seller's are authorized to bind the Seller to any affirmation, representation, or warranty, oral or written, unless by separate written instrument designed by Seller, which by its terms state that it is included as part of this agreement.

Claims: Receipt of goods shall be deemed acceptance of the goods received. All claims for defective goods or revocation of acceptances, for shortages, for delays, or failures in shipment or delivery, or for any cause shall be deemed waived and released by the Buyer unless it is made in writing within (7) days after receipt of goods. All claims must state specifically and in reasonable detail the nature of all objections, and must be accompanied by delivery receipt or photocopy of the sales order or packing slip. Any delivery not placed in dispute in a timely manner shall be paid for by the Buyer and all uncontested amounts due shall be paid by the Buyer with terms specified. As a condition to making a claim for missing or damaged goods sent, the Customer is responsible for initiating and pursuing with the carrier.

Limitation on Seller's Liability: Seller's liability will be limited to replacement or repair of defective goods upon receipt of goods in a timely manner per paragraph two herein. In no event will Seller be liable for consequential or special damages or for transportation, installation, removal, adjustment or other expenses or losses which may arise in connection with the use or installation of the goods; late delivery, failure to deliver or from any other cause. Notwithstanding the terms of this Agreement, if there should arise any liability of Seller, such liability shall be limited to an amount equal to one-half (1/2) the costs of the goods or \$250.00, whichever is less.

Returned Material: In no case will the seller give a refund. Seller will accept most goods for exchange or credit, at the Seller's discretion within 30 days of purchase date. In no case are goods to be returned without first obtaining Seller's permission. Only unused goods as currently manufactured, in original unopened packaging and which has been paid for by Buyer in accordance with Seller's payment terms will be considered for exchange or credit upon receipt of proof of purchase. Special ordered items and obsolete items cannot be returned for credit. Material accepted for credit will be subject to a 15% restocking charge for service and handling. Seller will not be obliged to replace any product that has been abused, improperly installed or otherwise misused. Items must be returned in their original packaging, securely packed to reach the Seller without damage.

Governing Law: This agreement shall be governed by the laws of the State of Tennessee.

IT IS THE USER'S RESPONSIBILITY TO ENSURE THAT THIS EQUIPMENT IS USED IN ACCORDANCE WITH THE LAW(S) OF THE JURISDICTION IN WHICH THIS EQUIPMENT IS UTILIZED.

DO NOT ATTEMPT TO RETURN PRODUCT TO ORIGINAL MANUFACTURER, AS THIS PRODUCT HAS BEEN MODIFIED AND IS NO LONGER SUBJECT TO ORIGINAL MANUFACTURER'S WARRANTY. IN THE CASE OF A DEFECTIVE PRODUCT, CONTACT PLACE OF PURCHASE FOR RETURN PROCEDURE.

THIS EQUIPMENT HAS BEEN TESTED AND HAS BEEN FOUND TO BE IN COMPLIANCE WITH THE LIMITS FOR A CLASS B DIGITAL DEVICE, PURSUANT TO PART 15 OF THE FCC RULES. THESE LIMITS ARE DESIGNED TO PROVIDE REASONABLE PROTECTIONS AGAINST HARMFUL INTERFERENCE IN A RESIDENTIAL INSTALLATION. THIS EQUIPMENT USES, GENERATES AND CAN RADIATE RADIO FREQUENCY ENERGY AND IF NOT INSTALLED AND USED IN ACCORDANCE WITH INSTRUCTIONS, MAY CAUSE HARMFUL INTERFERENCE TO RADIO COMMUNICATIONS.

Part 15 Low Power:

ANY CHANGES OR MODIFICATIONS TO THIS EQUIPMENT WITHOUT THE EXPRESS AUTHORIZATION OF THE MANUFACTURER COULD VOID THE USER'S AUTHORITY TO OPERATE THIS EQUIPMENT. (RULE 15.21 OF THE FCC)

XTREMELIFE DVR WITH PIR & LONG LIFE BATTERY



**Congratulations and Thank You
for purchasing the Extremelife DVR with battery!**

The Extremelife system is an all-in-one DVR with PIR and long life battery. All you need to do is charge it attach the included PIR, attach a camera (sold separate in some cases) turn it on, insert an SD card and the system will begin to record when it detects heat / motion.

The Extremelife system has many advanced features and functions but the best feature is already preset for your quick set up.

Quick Set up Guide

See diagrams below

 
Fully charge unit for 18 hours prior to use for the best results.



Press the power button for 1 second, the power LED will illuminate blue, then it will blink every 3 seconds. To check the battery life press and hold the battery button.

Attach the camera in the camera port

Attach the PIR sensor (included) into the correct port
Use caution when plugging in the camera and PIR, line up pins so that the fit is correct, do not force the camera and PIR plugs in unit.

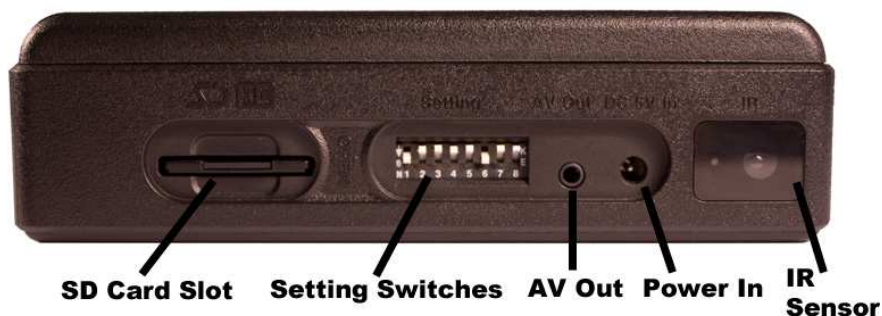

Insert SD card into slot

Push all switches in the up position to record with the factory default settings. (see below)
Factory Default settings using the switches:

15 second clips (to change the clip length see chart on page 3)

PIR sensitivity: Low (to change the PIR sensitivity see chart on page 3)

To turn the unit off, press and hold the power key until the blue light goes off.

If you wish to change factory default setting you would need to go through the entire menu and pick your desired selections. See Advanced Features instructions to change default settings beginning on page 4

FAQ

What is a PIR?

A Passive Infrared sensor (PIR sensor) is an electronic device that measures infrared (IR) light radiating from objects in its field of view. PIR sensors are often used in the construction of PIR-based motion detectors. Apparent motion is detected when an infrared source with one temperature, such as a human, passes in front of an infrared source with another temperature, such as a wall. The PIR will pick up from a distance of approximately 30 feet.

Safety & Precautions

All the recorded files are stored in the IMAGE/VIDEO folder.

If the file is corrupted so that it cannot be played, The system will return to the file detailed list.

The player can distinguish an unlimited number of files/folders. However, within a folder, only up to 999 files can be distinguished.

The supported video file is AVI

All data in the device may be deleted due to excessive impact, lightning, power surge etc., the manufacturer does not warranty losses caused in the above conditions, please protect and back up the data in the device properly.

Avoid heavy vibration while recording, which might damage the hard disc or other components inside the unit.

Please do not apply heavy pressure to your Extremelife the player may be damaged.

If the card does not slide in smoothly, do not force or push it, which might damage the memory card & the unit.

Check and make sure the card is plugged in facing the right side.

 
When you take out the SD card, push the card in, then it will spring out, then pull the sd card from the unit.

Do not use harsh chemicals on the unit, If you want to remove dust please clean the body with a soft dry cloth, if dirt or stains are left, you can clean it with a small amount of cleansing liquid. Do not immerse in any liquid.

If the recording environment is motionless, recording will stop, “detecting” will appear in the bottom of screen until the sensor detects motion, the recording will start again, and the same event will be repeated.



In Motion Detect Mode , Press  SETUP button, the setting items appear:

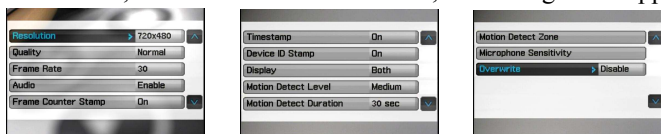

Resolution (352*288 /640*480/720*56/1024*768/1280*720/1280*960)

Quality (Good/Norma/ Low)

Frame Rate (1 / 5/ 15 /20/25)

Audio (Enable/Disable)

Frame Counter Stamp (On/Off)

Timestamp (On/Off)

Device ID Stamp (ON/Off)

Display (LCD/TV/BOTH)

Motion Detect Level (High/Medium/Low)

Motion Detect Duration (30 sec/1min/3 min/ 5 min/ 10min)

Motion Detect Zone >Press  to select the area for target of motion detect.

Safety Precautions and Notes

Use only the included power supply to operate your Extremelife system

(AC: 120 Volt, 60 Hz ONLY, if outside the US and Canada a special adaptor may be required).

To avoid electrical shock, do not attempt to open the unit.

Opening the unit Voids the warranty

To prevent fire or shock hazard, do not expose this product to direct rain or moisture.

Do not operate near bath tub, sink, or swimming pool.

Avoid operation in moist environments.

Do not overload electrical outlets or extension cords as this may result in fire or electric shock, this unit works only on 120 Volt .

Power surges or over voltage (i.e. 220 Volt) will damage the unit and void the warranty. A surge suppressor and other adaptors may be required and are the responsibility of the user.

 
 
Downloaded from Caradio-Manual.com Manuals

Features and Functions of the Extremelife DVR

FULLY CHARGE THE BATTERY FOR 18 HOURS

BATTERY LIFE: CONTINUOUS USE APPROXIMATELY 20 HOURS / STANDBY APPROXIMATELY 375 DAYS

THE MAXIMUM SD CARD YOU CAN USE IN THIS UNIT IS 32GB

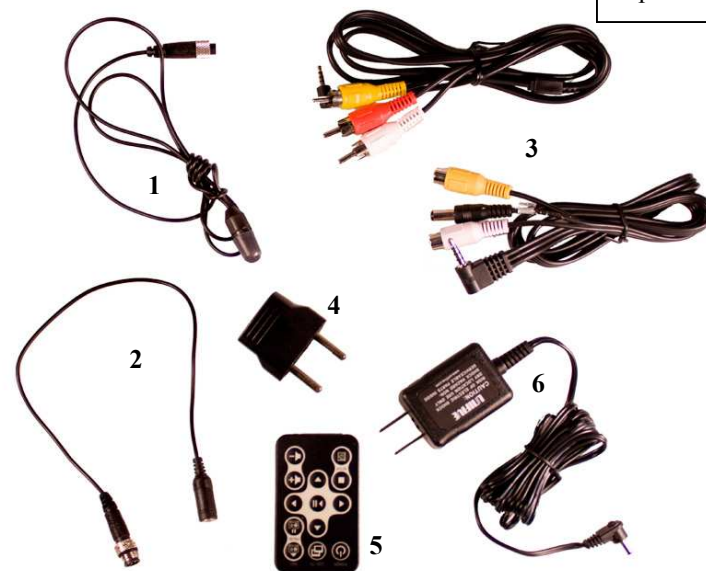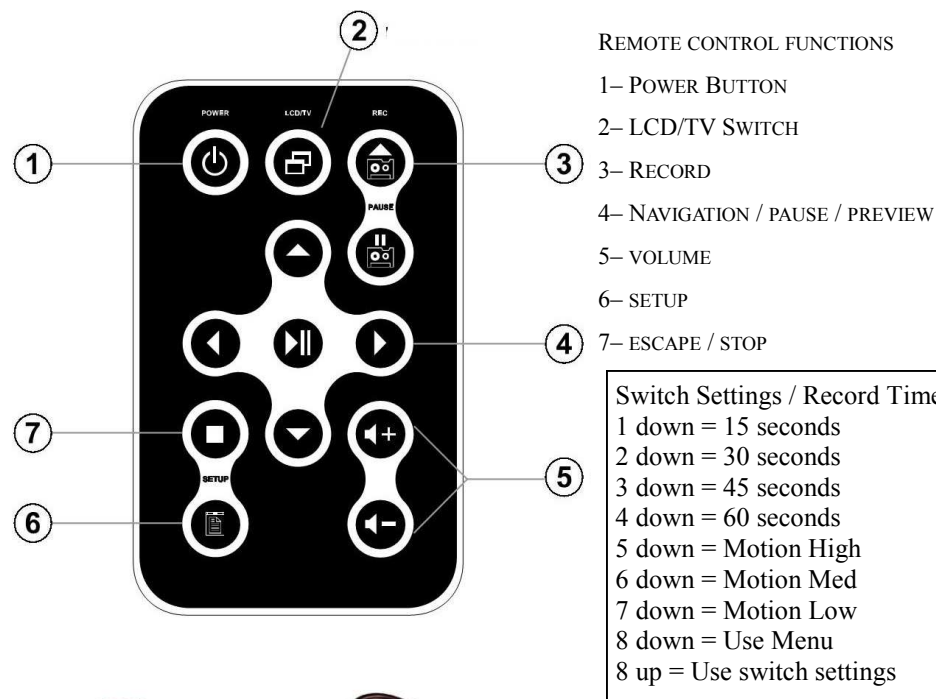

Accessories

- 1– PIR Sensor
- 2– Camera adapter
- 3– RCA in and out Cables
- 4– Euro adapter
- 5– Remote Control
- 6– AC Adapter

Menu and Settings

To view Main Menu

Push switch 8 down & connect to monitor as shown below

Press the Setup button on the remote to enter the main menu

Use the remote to navigate through the screens (see diagram page 3)

Video file playback

Browse images and picture

External video source recording

 
Functions setting




Switch 8 in the down position
Switches 1-8 in the up position



AV in on monitor

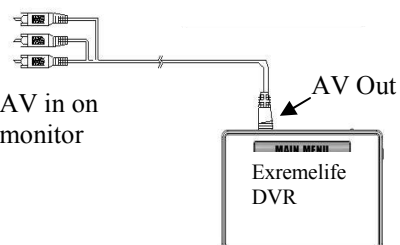

In File List Mode: Press SETUP button  the setting items appear:

Start Slideshow

Image Thumbnail (On/Off)


Playback Slideshow (No/All)

Slideshow Duration (3 sec/ 5 sec/ 7 sec/10 sec)

Delete Directory



Connect an external Camera


Select Record function then press  to enter record page

Preview




Before connecting an external camera, there's no signal on the screen; after connecting, screen will show up preview mode and stand by to record.


Press REC button on the remote control; Press  STOP to finish recording.

In Preview mode: Press  SETUP, the setting items appear:
Resolution (352*288 /640*480/720*56/1024*768/1280*720/1280*960)
Quality (Good/Normal/Low)
Frame Rate(1 / 5/ 15 /20/30)
Audio (Enable/Disable)
Frame Counter Stamp (On/Off)
Timestamp (On/Off)
Device ID Stamp (On/Off)
Display (LCD/TV/Both)
Microphone Sensitivity
Overwrite



 
Motion Detect (Press REC to start recording)

Select Motion Detection and press  to enter.

Press REC button on the remote controller to start Recording. Press STOP  button to finish recording.

Operations in Main Menu

Press IMAGE to choose the newest Photo file and then to select the photo file to browse; Press to the upper file folder listed in date; Press once more to the upper level / MyRecord.

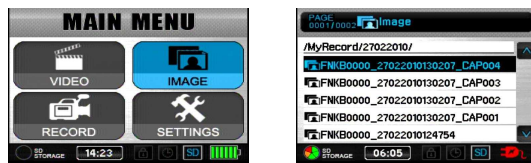


Start slideshow

In File list Mode or Image Browsing Mode, press SETUP to show the setting items, select "Start Slideshow" to start the Slide Show; Press / to choose Slide Show then press to start slide show. Press to stop Slide Show and return to the file list.




 While selecting photo in a image file Press SETUP button , the setting items appear:

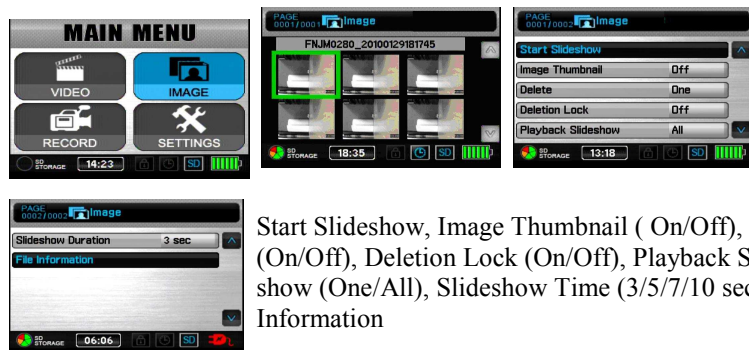

Start Slideshow, Image Thumbnail (On/Off), Delete (On/Off), Deletion Lock (On/Off), Playback Slide-show (One/All), Slideshow Time (3/5/7/10 sec), File Information

 During Photo Browsing: Press SETUP button , the setting items appear

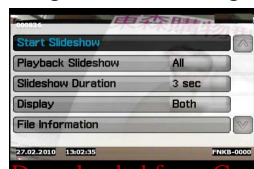

Start Slideshow, Playback Slideshow (All/No), Slideshow Duration (3 sec/ 5 sec/ 7 sec/10 sec), Display (LCD/TV/BOTH)

 
 
File Information(Tap it to read file information)
Press STOP to return to the upper level.

In the MAIN MENU mode, press the SETUP button on the remote control to enter the SETTINGS mode; or use the navigation buttons to navigate to the SETTINGS, and press center pause button.

Press ESC button to escape Setting Mode.

To navigate the submenu press

To select a sub menu press

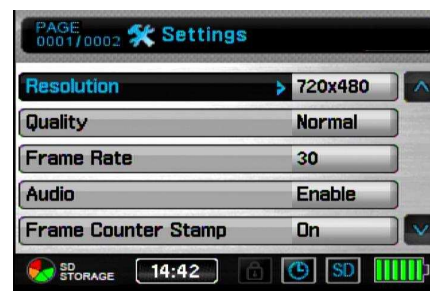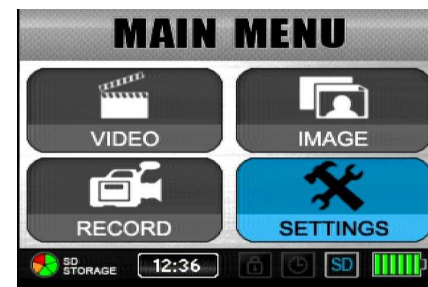

Resolution
(352*288 /640*480/720*576/1024*768 /1280*720/1280*960)

Quality (Good/Normal/Low)

Frame Rate(1 / 5/ 15 /20/25)

Audio (Enable/Disable)(not available in all models)

Frame Counter Stamp (On/Off)

Timestamp (On/Off)

Device ID Stamp (On/Off)

Display (LCD/TV/Both)

Microphone sensitivity (not available in all models)



Press on Pre-event to start setting each function as below.





Pre-event cont.

Resolution

(352*288 /640*480/720*576/1024*768/1280*720 /1280*960)

Quality (Good/Normal/Low)

Frame Rate (1 / 5/ 15 /20/25)

Audio (Enable/ Unable) (not available on all models)


Frame Counter Stamp (On/Off)

Timestamp (On/Off)

Device ID Stamp (ON/Off)

Display (LCD/TV/BOTH)

Pre-Event Duration (30 sec , 15 sec)

Motion Detection Press  to start setting each function as below.



Resolution

(352*288 /640*480/720*576/1024*768/1280*720/1280*960)

Quality (Good/Normal/Low)

Frame Rate (1 / 5/ 15 /20/25)

Audio (Enable/ Unable) (not available on all models)

Frame Counter Stamp (On/ Off)

Timestamp (On/Off)

Device ID Stamp (ON/Off)

Display (LCD/TV/BOTH)

Motion detection level (LOW/Medium/High)

Motion Detect Record time (30sec/1min/3min/5min/10 min)

Motion Detect Zone



Microphone sensitivity



(not available on all models)



Over-write (Disable/ Enable)



Reverse Playback

Two times reverse playback: Press  during normal playback, the video file will be played with a speed two times faster, Press  to resume the normal playback speed.

Four times reverse playback: Press  twice during normal playback, the video file will be played with a speed four times faster, Press  to resume the normal playback speed.

Eight times reverse playback: Press  three times during normal playback, the video file will be played with a speed eight times faster, Press  to resume the normal playback speed.

Pause Press  to pause the video, Press  again to resume the normal playback speed.


Stop Press ESC  button to stop playing and return to File List mode.

During Video Playback Press  pause button, the video will be paused, and the setting items will appear







In File List mode Press  button, the setting items will appear:

 


In the upper-file Press  button, the setting items will appear:







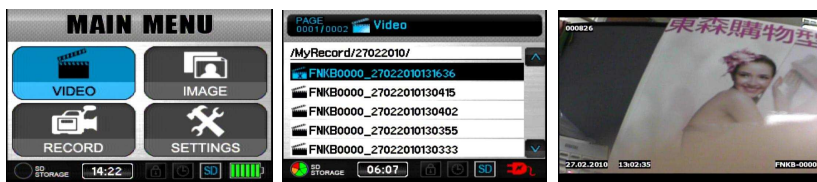

Press  on the VIDEO option on the Main Menu to open the newest files




Choose the files to play  the video as below. Then Press ESC  button to enter MyRecord file, Press ESC  button to enter the main menu.






Fast Forward Playback:




Double Speed Playback: Press  during normal playback, the video file will be played with a speed two times faster, press  to pause the video, Press  again to resume the normal playback speed.




4 Times Speed Playback: Press  twice during normal playback, the video file will be played with a speed four times faster, press  to pause the video, Press  again to resume the normal playback speed.

8 times Speed Playback: Press  three times during normal playback, the video file will be played with a speed eight times faster; press  to pause the video, Press  again to resume the normal playback speed.


Slow motion function

1/2 Speed slow motion: Press  after pausing the playback, Press  once, the video file will be played in 1/2 speed slow motion; Press  again to resume the normal playback speed.


1/4 Times Speed Playback: Press  after pausing the playback, Press  twice, the video file will be played in 1/4 speed slow motion; Press  again to resume the normal playback speed.

1/8 times Speed Playback: Press  after pausing the playback, Press  three times, the video file will be played in 1/8 speed slow motion; Press  again to resume the normal playback speed.

Setting Date and Time

Press  **Date and time** to select.

In the sub-menu bar  / , Press  /  to enter the last or next item/page.

Press  to finish the selection.



Press  on **Date Time Format** to select.

Choose the language for Operating interface

Press  on **Language** to select.




Pre-set Recording Mode > set up the screen to be automatically returned to which recording mode



Resume to pre-set duration > Setting how long to be resumed to the Pre-Set mode



Timer recording > set up the timing to recording mode

In Timer recording setting, Press  to select one blank column in order to reset the timer.



 
Once timer setting is set, the screen will appear as below



Notice: you need to set the setting to “ON” to book the reserved recording successfully; the reservation will be executed only when the device is in Powered on state

Indicator > Setting to turn on/off the indicator (LED)

Back light out duration to turn off the backlight during the device is not used.

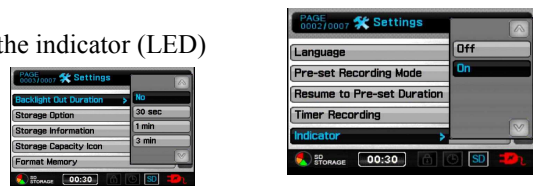



Storage option > accepts SD card only, up to 32GB

Storage information > show the size and the free space of the storage.



Storage capacity Icon

SD card needs to be inserted to slot then  will be displayed in the

 
left-bottom side of screen. Press  to the last page

Format memory > allows user to format SD card

(this will erase ALL files on the SD card)



TV-out settings

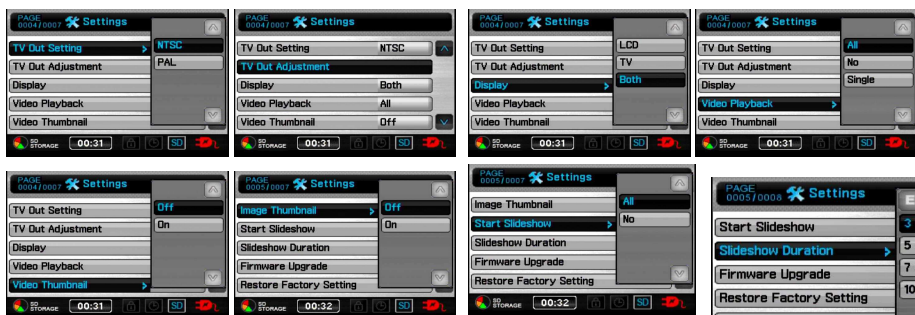

Slideshow duration > time duration for slideshow



Firmware upgrade > Insert the SD card which contains updated software into the device and press enter button, after the system is updated, it will reboot automatically; if the message “Update Error” is shown, it means that there are errors during updating, it might be that the software is incomplete or the memory card has some problem, please use another memory card, or reboot the device after inserting the memory card. Push < or > to select ok or Cancel for Firmware Upgrade, after select press < or > confirm the setting.



Restore factory setting: If you would like to change The settings back to factory default push < or > to confirm.


This will erase all previous Optional settings.

 
 
 


Power on password: when unit is turned off if this function is set to “ON” you will be required to enter a password to access the unit.



Set power on password: Press  /  on the remote control to choose your

six-character and then confirm these characters once more pressing,  button to complete the setting.

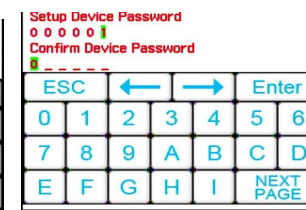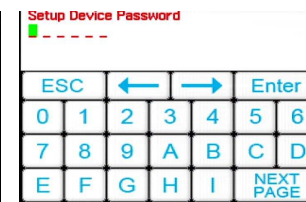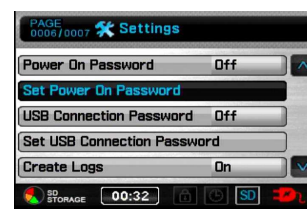

Write your password in a safe place.